


Installation guide



VCT Adhesive
NuSprayLok DK-15


Applying Adhesive

①




- Store adhesive at a minimum temperature of 68° F (20° C) for 24 hours prior to installation.
- Condition flooring per manufacturer's recommendations.

②




- Ensure substrate, flooring and surrounding areas are clean and dust free.
- Damp-mop substrate if dust is present.
- Only use Portland based patching and leveling compounds.

③




- Wipe hand across surface.
- If dust transfers, substrate is not clean.

④



- HVAC must be continuously operated for a minimum of 72 hours at a temperature of no less than 68° F (20° C) prior to installation.

⑤

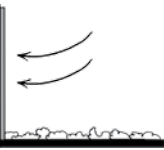

- Protect wall from overspray with a spray shield, paper or masking.

⑥




- Shake aerosol can well.




- Remove white cap.

⑦

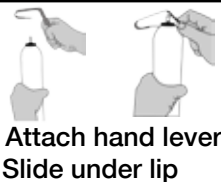


- Attach hand lever
- Slide under lip

OR



- Use your finger.


⑧



1. Stand straight up, bend over only when necessary.
2. Adhesive should spray out in a wide mist and fall similar to snow towards desired surface.
3. Hold can upside down slight away from the body as illustrated, approximately 20-30 inches (50-76 cm) horizontally from the substrate. Aim at floor and press hand lever.

Avoid extremely heavy application. For proper coverage refer to spray pattern photo on back.

⑨



COVERAGE

200 sq. ft.


PER CAN

- Walk right to left, smoothly to achieve the results in the photo on the reverse side.

NOTE


- Spraying in a sweeping motion may result in an inconsistent spray pattern.
- Excess buildup or inconsistent spray pattern on substrate may cause telegraphing.

⑩




- To ensure optimal spray pattern, remove any adhesive build up that may occur during the application process.

⑪




- If overspray occurs, it may be removed with a damp cloth while the adhesive is still wet.

⑫

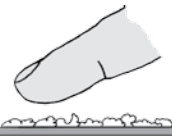

- Allow adhesive to dry until there is no adhesive transfer when lightly touched.
- High humidity and/or low temperature increases tack time.

⑬



Two Hours


- Open time after application is 2 hours. While open, ensure that adhesive is not contaminated by dust.

Applying VCT Adhesive




Follow Flooring Manufacturer's Recommendations for Installation

After rolling, floor is ready for all access.

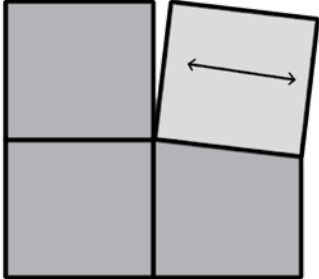

- Position tile.
- Ensure proper alignment before application of pressure.
- Reposition as necessary.

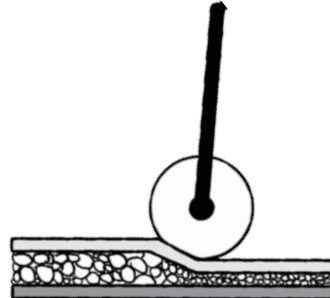

- Roll tile with a 100 lb. roller within 1 hour after installation to complete the bonding process.

Coverage Per Can

Approximately 200 sq. ft. (18.5 m. sq.)

Match spray pattern by placing guide on floor.



WWW.THEMOHAWKGROUP.COM

Tech Services
800.833.6954
800.443.2241